

HOME DECORATORS

collection


HARWICK LIFT TOP STORAGE BENCH 60"W

Assembly Instructions

HDC #:71452 · MFG#:4856-L

Please read over the instructions; it will be a time-saver in the long run.

Note: Before Assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

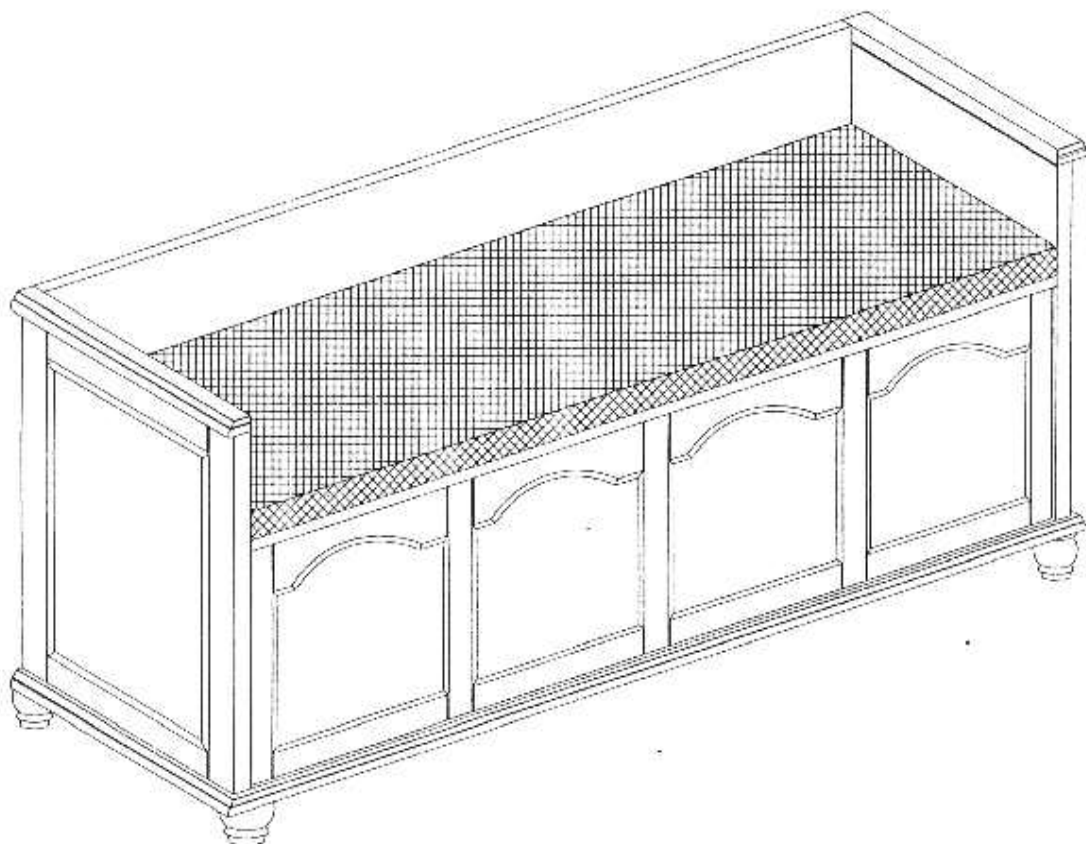

Parts Check List

Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.




① Bottom Panel-1




⑥ Top Panel-1



② Left Side Panel-1




⑦ Cushion-1



③ Right Side Panel-1




⑧ Foot-4

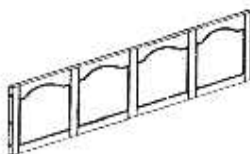

④ Front Panel-1



⑨ Middle Foot-1

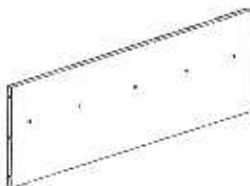


⑤ Back Panel-1

Hardware Check List


Please take all hardware out of the hardware bag.

A 
Cam-bolt-20


B 
Cam-lock-20

C 
Cover-20


D 
Allen Wrench-1 ($\phi 1/4"$)


E 
Safety Hinge-2 (L-1, R-1)


F 
Flat Head Screw-8 (#6 \times 14mm)

G 
Allen Bolt-3 ($\phi 1/4" \times 1-1/4"L$)



H 
Lock Washer-3 ($\phi 1/4"$)

I 
Flat Washer-3 ($\phi 1/4" \times 16D$)

J 
Wood Dowel-18 ($\phi 8 \times 30mm$)


K 
Glue-1 (25g)

When inserting cam-bolts, the shoulder should be flush with the surface. If using an electric screwdriver, be careful not too over tighten the Cam-bolt, this can cause damage .

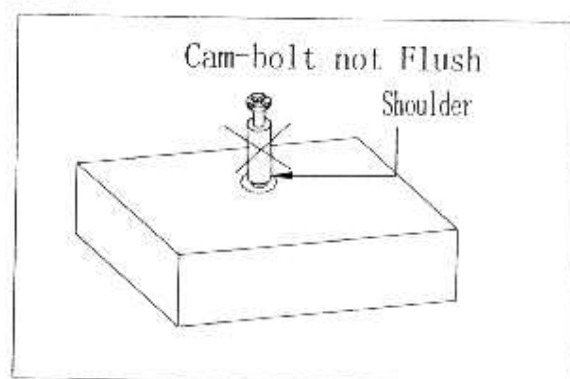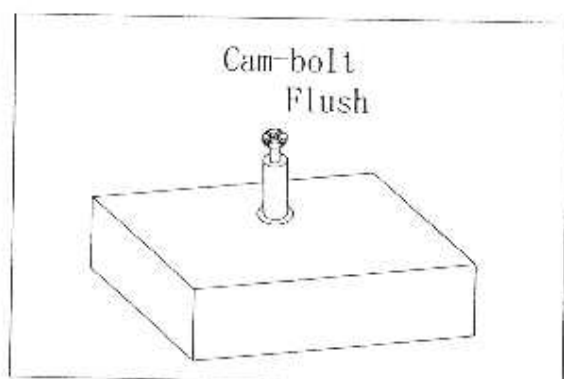


How to use Cam-Locks


Cam-locks should be inserted into their designated holes with the arrow pointing to the nearest edge. The coordinating Cam-bolt will be inserted into the Cam-lock. Using the allen wrench or a flat-head screwdriver, tighten the Cam-locks until you feel resistance. Over tightening the Cam-lock may break the cam-lock.

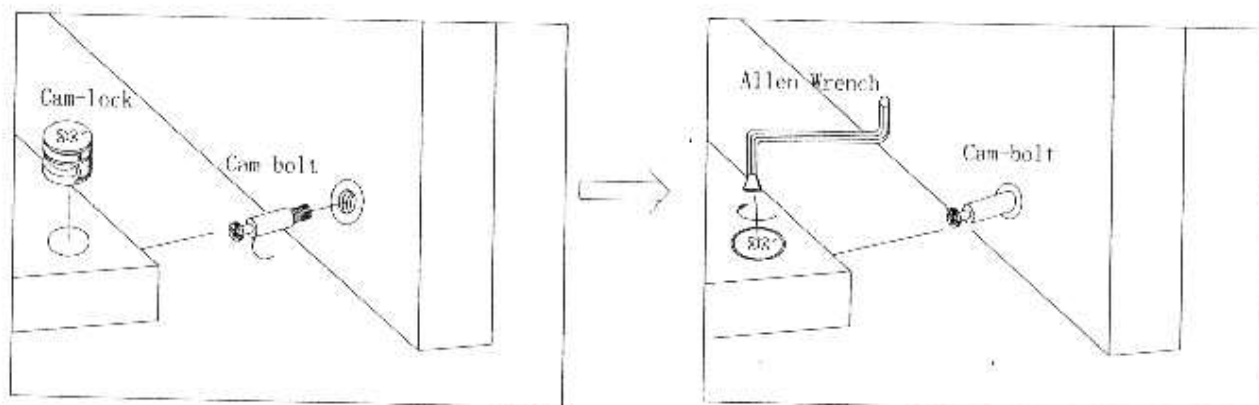


1. Fill the middle hole 1/4 of Glue (K) in both end sides of Side Panel (2&3) and Front Panel (4) and Back Panel (5) and Top Panel (6) for wood dowels, Then insert Wood Dowels (J).

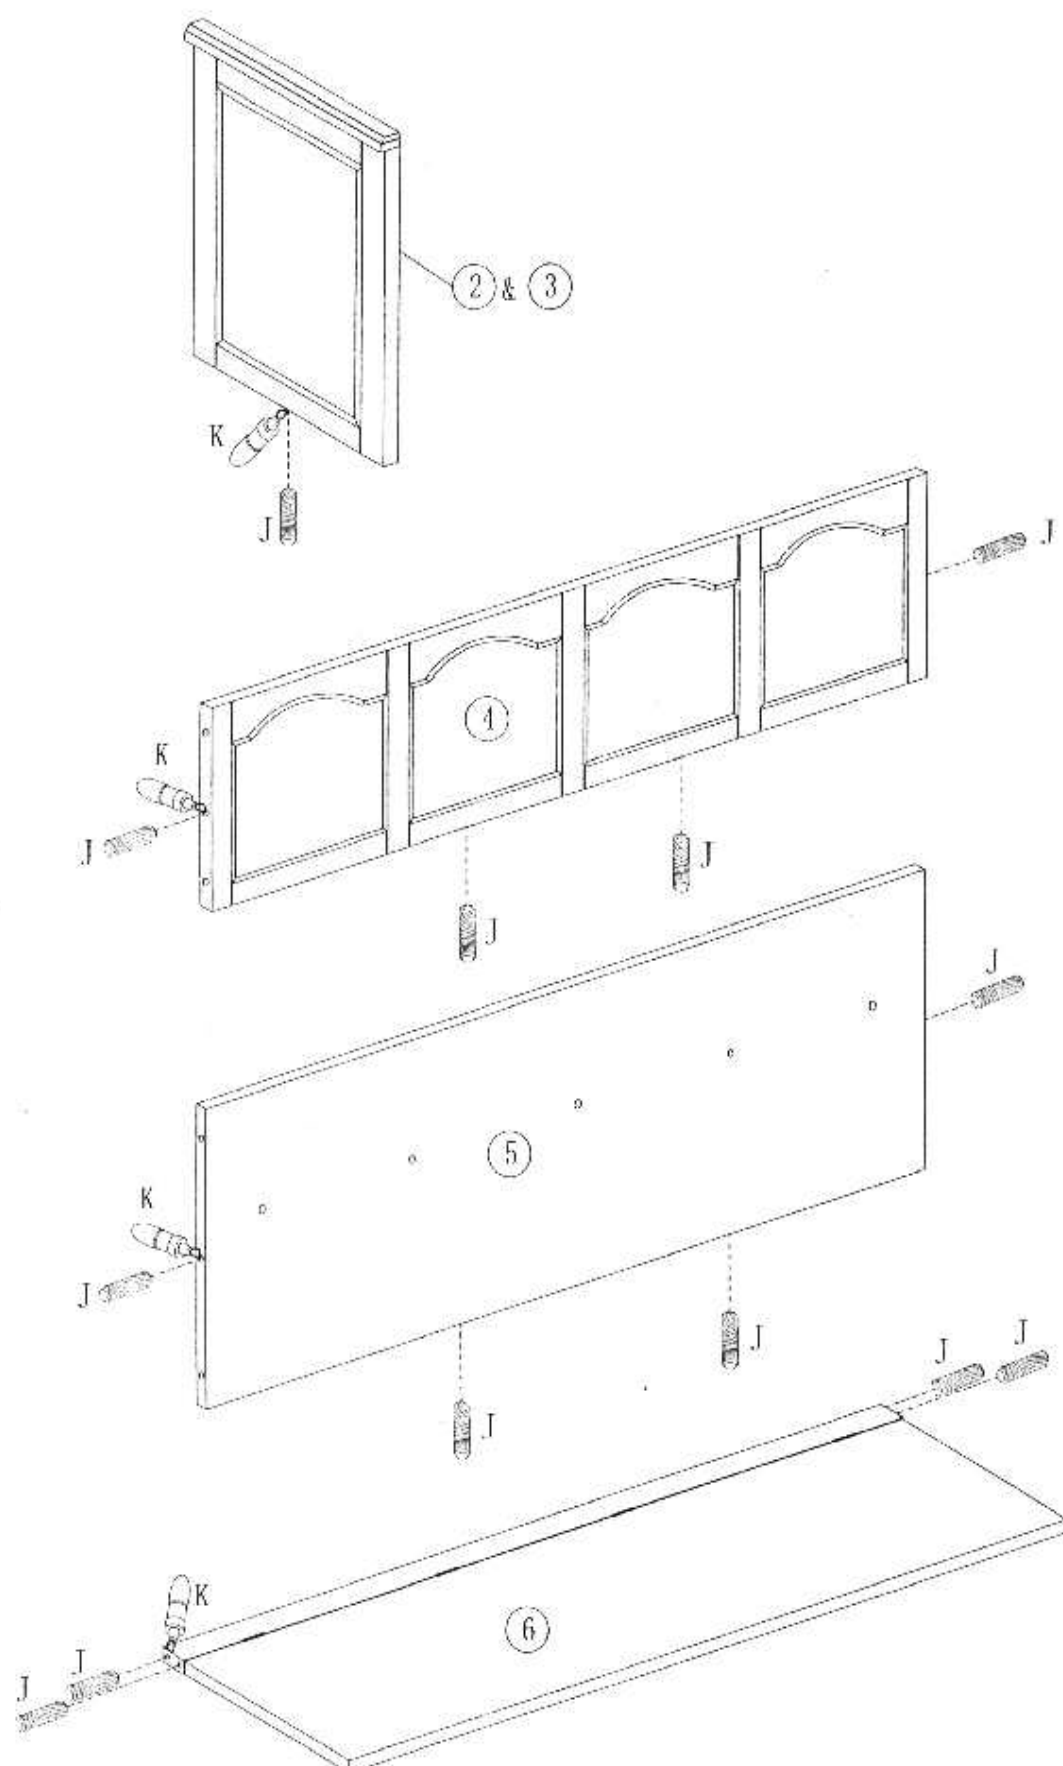


2. Screw Cam-bolts(A) clockwise into the threaded holes in Bottom Panel(1) and Side Panel(2&3).

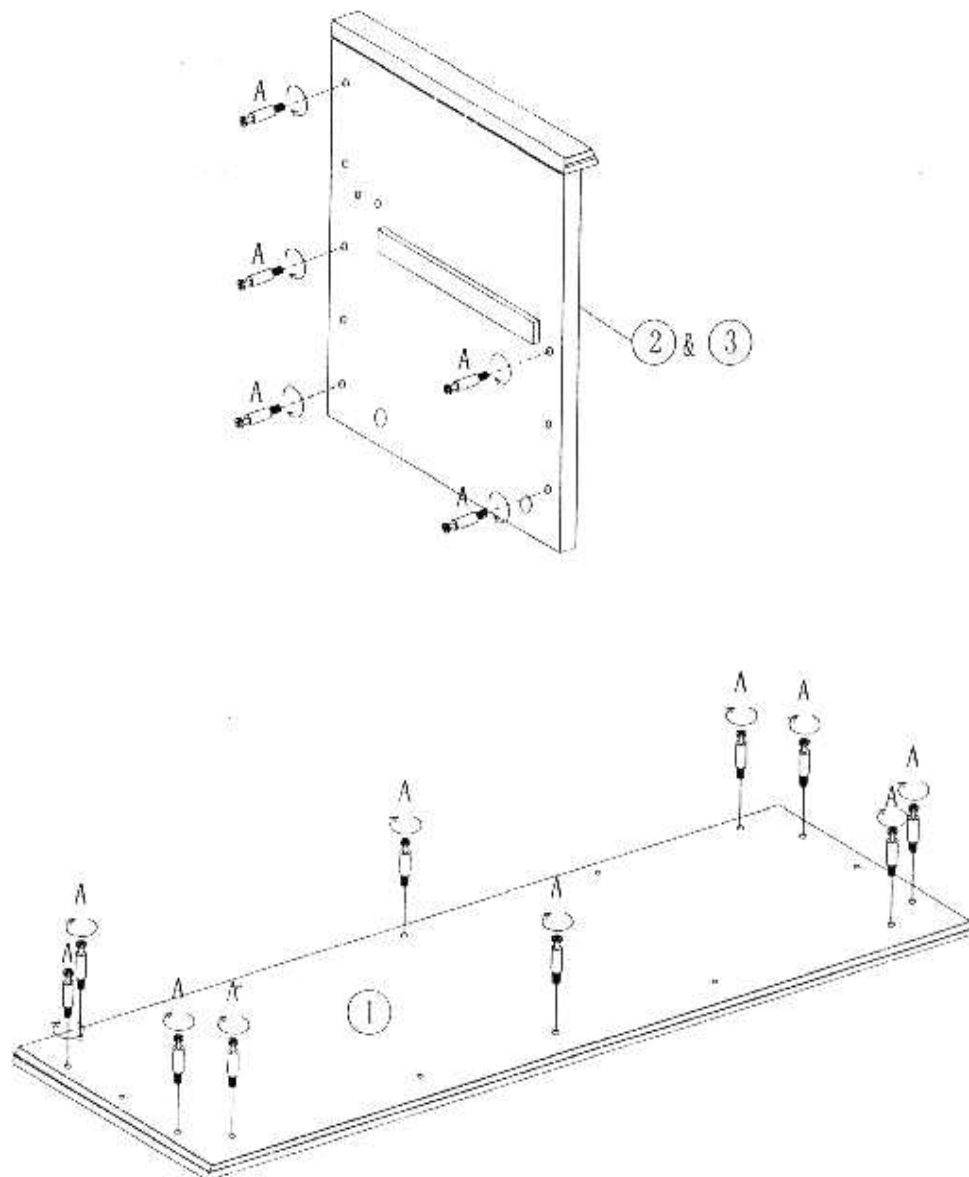


3. Attach Top Panel (6) to Back Panel (5), Then attach front Panel (4) and Back Panel (5) and Top Panel (6) to Side Panel (2&3), with Cam-lock (B) by allen Wrench (D) as figure shown. Cover all cam-locks (B) with cover (C). Cut in Allen Bolt (G), Lock Washer (I), Flat Washer (H) to Back Panel and Top Panel back Crossbar, by Allen Wrench (D) screw down.

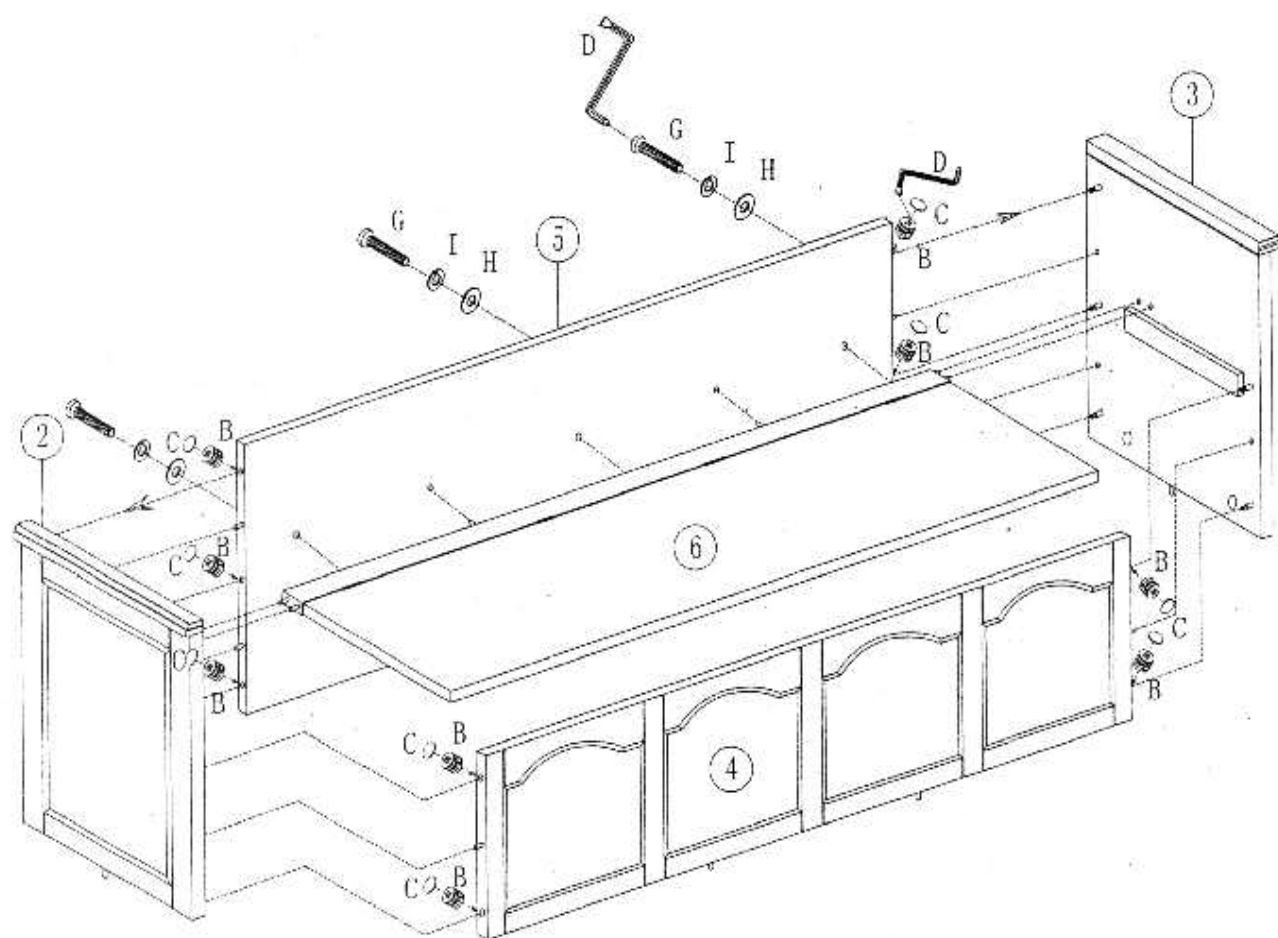

4. Attach Back Panel and Front Panel and Side Panel to Bottom Panel (1), with Cam-lock (B) by allen Wrench (D) as figure shown. Cover all cam-locks (B) with cover (C). Rotate foot (8&9) clockwise to tight them into Bottom panel (1) as figure shown.

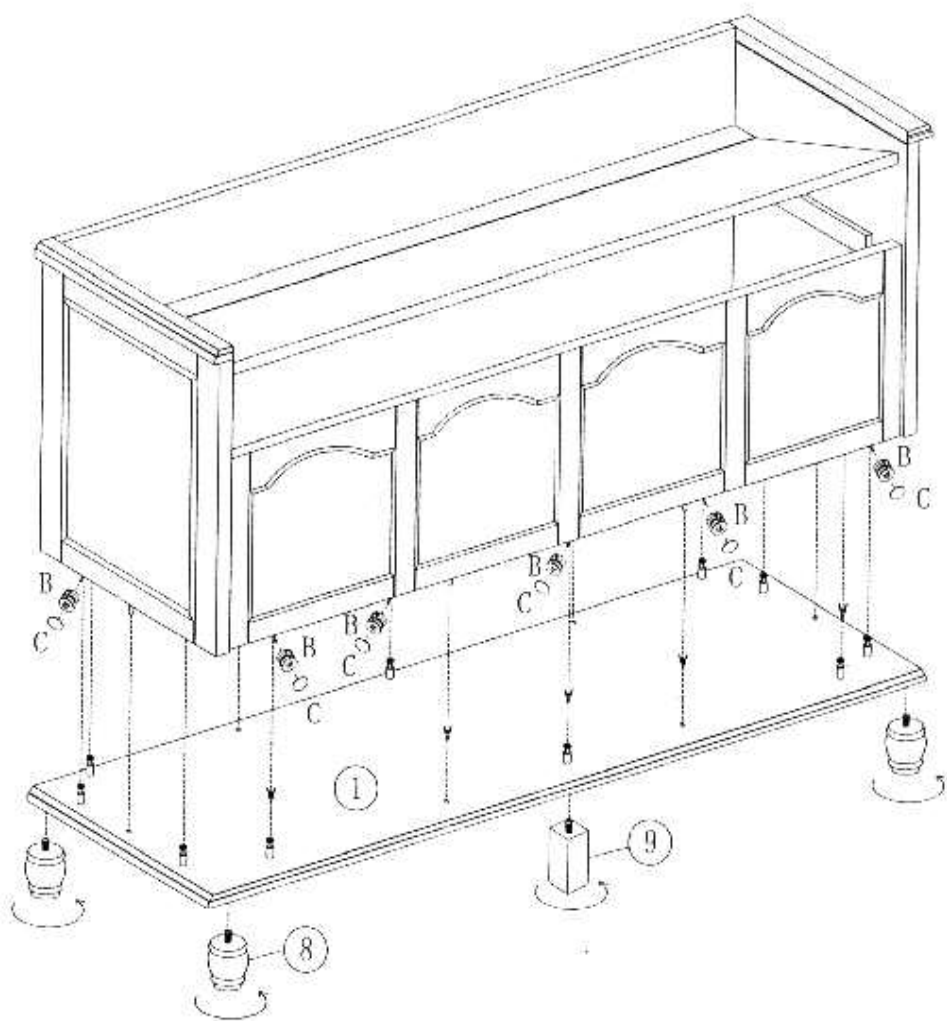

5. Open the Top Panel(1), Install the Safety Hinge(II) to the pre-drilled holes in left side panel and right side panel with screws(C) by a screwdriver and tighten the other head to the top with screws(C) by screwdriver. Put the cushion (7) on Top Panel.

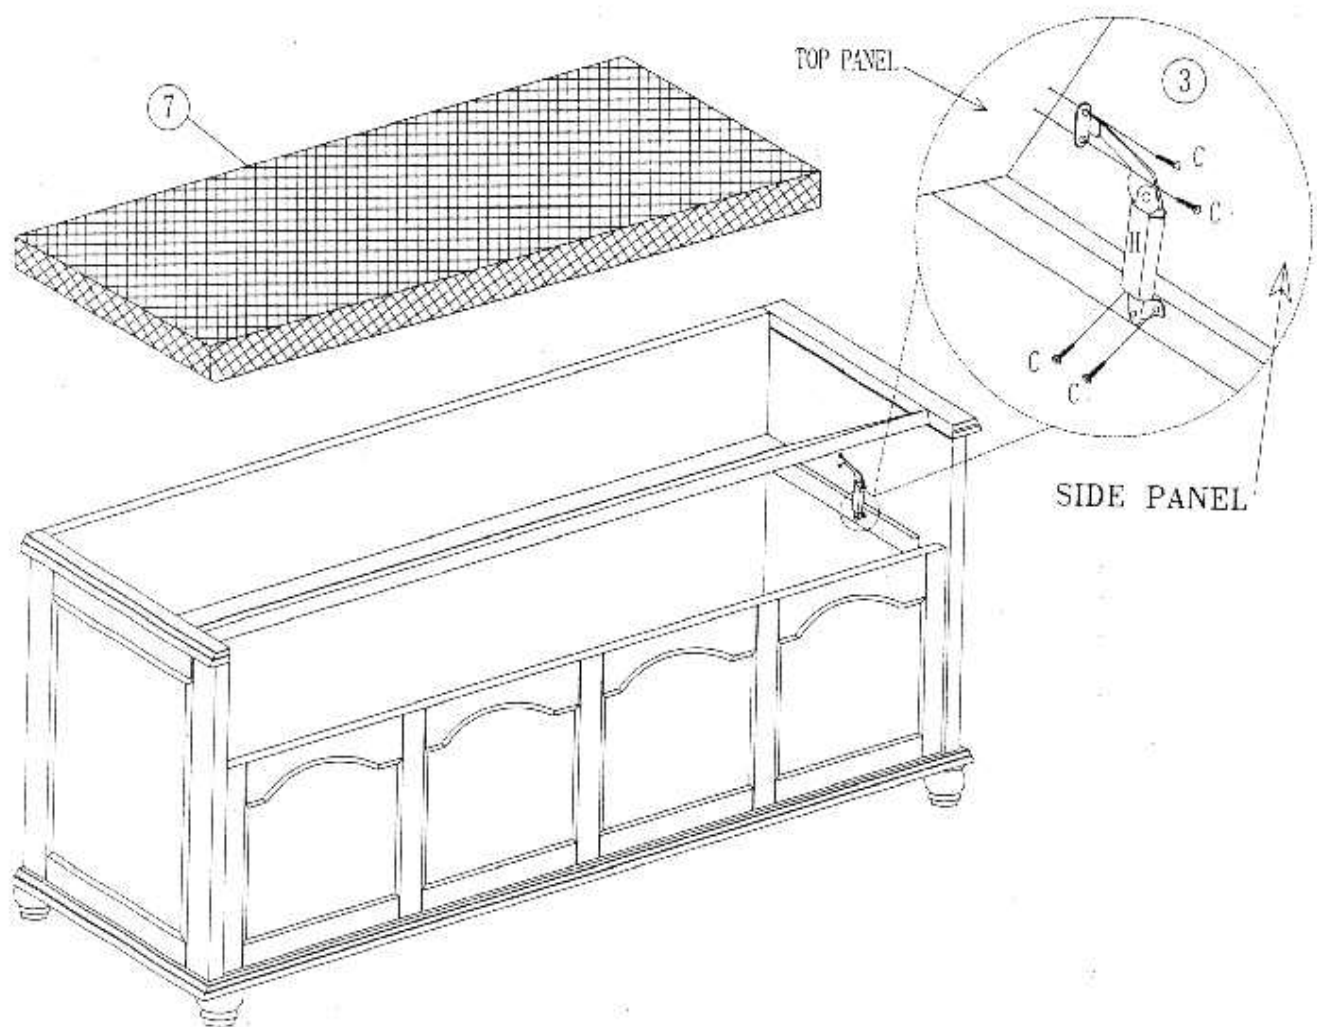

THE ASSEMBLY IS COMPLETE NOW.

